

# BMW R 1200 CL

## W skład zestawu wchodzi (jak pokazano na Rys. 1):


1. 2 uchwyty płaskie.
2. 2 śruby imbusowe M8/50 mm z podkładkami.
3. 2 śruby imbusowe M8/40 mm z podkładkami.
4. 4 śruby imbusowe M8/35 mm z podkładkami.
5. 4 obejmy typu „U” z nakrętkami i podkładkami.
6. Orurowanie prawe.
7. Orurowanie lewe.

Orurowanie powinno być zakładane tylko przez osobę wykwalifikowaną. Należy zwrócić szczególną uwagę na wiązki elektryczne, przewody hamulcowe oraz przewody gumowe chłodzenia silnika tak, aby nie były przyciśnięte lub nie tarły podczas eksploatacji o gmołe z powodu źle przeprowadzonego montażu orurowania.

Całość orurowania założyć swobodnie dopiero na końcu skręcić docelowo.

1. Przymocować prawe orurowanie (Rys. 1 pkt. 6) do rurki stelaża kufra za pomocą 2 obejm typu „U” z zestawu (Rys. 1 pkt. 5).
2. Przykręcić orurowanie do rozwidlenia ramy motocykla używając jednego uchwyty płaskiego (Rys. 1 pkt. 1) oraz 1 śruby M8/50 mm (Rys. 1 pkt. 2), 1 śruby M8/40 mm (Rys. 1 pkt. 3) i 2 śrub M8/35 mm (Rys. 1 pkt. 4) z zestawu.
3. Dokręć wszystkie śruby mocujące prawy gmoł.
4. Powtórzyć kroki 1 – 3 instalując orurowanie po lewej stronie.

Rysunek 1

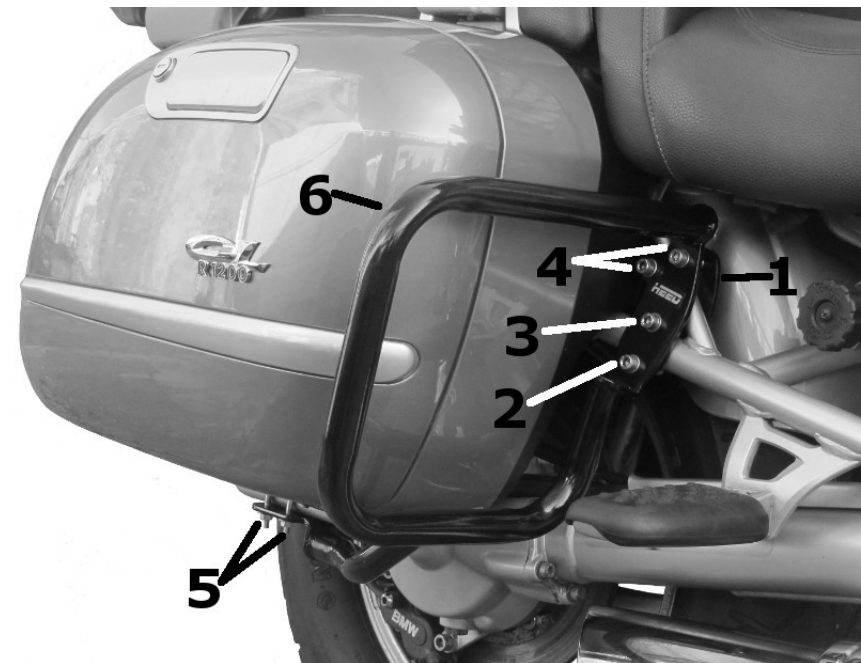

# BMW R 1200 CL

## The set includes (as shown on Figure 1):

1. 2 flat holders.
2. 2 allen bolts M8/50 mm with washers.
3. 2 allen bolts M8/40 mm with washers.
4. 4 allen bolts M8/35 mm with washers.
5. 4 „U” clamps with washers and nuts.
6. Left piping.
7. Right piping.


Piping should be installed only by a qualified person.

Pay particular attention to the electric beams, brake hoses and rubber hoses for engine cooling, so that they are not pinched or they don't chafe during operation due to wrong installation of piping.

During installation it is recommended to set up piping freely.

1. Attach the right part of piping (Fig. 1 pt. 6) to the trunk's rack pipe using 2 "U" clamps from the set (Fig. 1 pt. 5).
2. Screw piping to frame's fork using flat holder (Fig. 1 pt. 1) with 1 M8/50 mm bolt (Fig. 1 pt. 2), 1 M8/40 mm bolt (Fig. 1 pt. 3) and 2 M8/35 mm bolts (Fig. 1 pt. 4) from the set.
3. Tighten all screws holding the right piping.
4. Repeat steps 1 -3 during installation of piping on the left side.

**Figure 1**

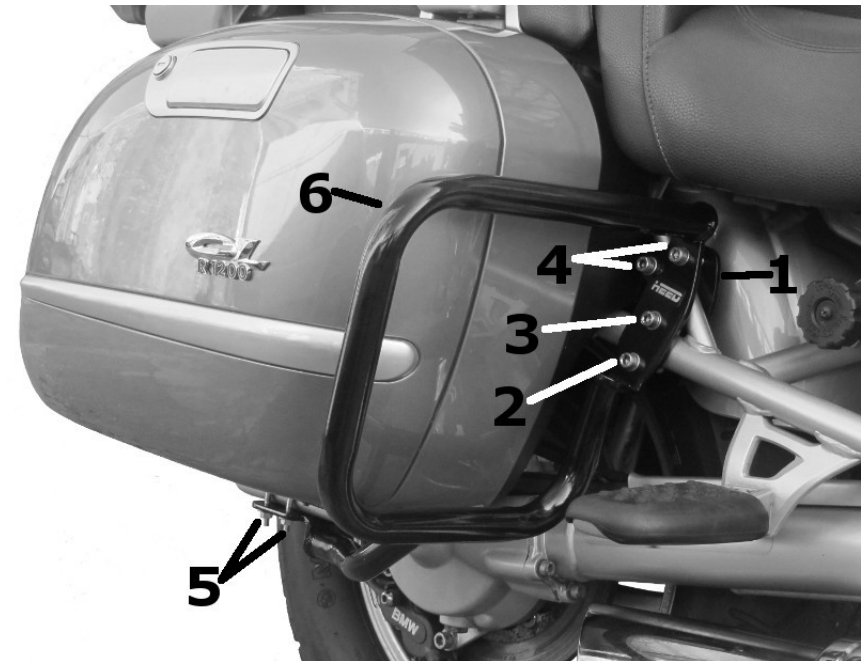

**HEED**

[www.heed.com.pl](http://www.heed.com.pl)